


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

Right-hand drive vehicle shown

- 1 Ground line
 2 Positive wire
 3 Seal
 4 Shield
 5 Alternator line
 6 Starter line
 7 Brake booster line
 8 Overflow hose
 9 Control cable
 10 Suction fan locking bracket
 11 Bolt
 12 Clamping wedge
 13 Retaining bracket
- G1 Battery
 M13 Heating water circulation pump

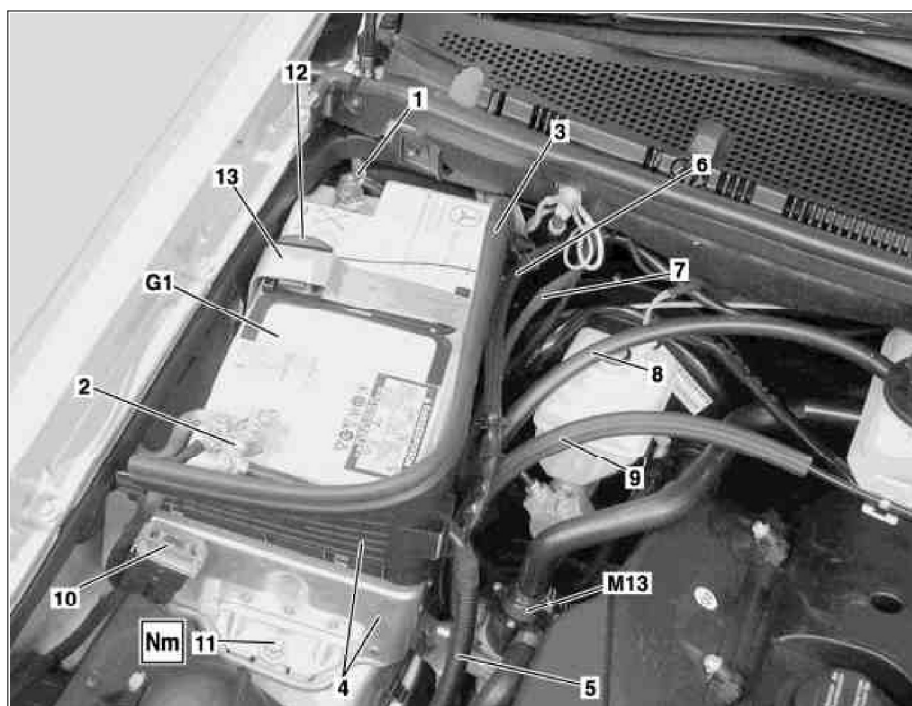

P54.10-2066-06

	Remove, Install			
	Danger!	Risk of explosion from electrolytic gas. Risk of poisoning and irritation if battery acid is swallowed. Risk of injury through burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, naked flames or smoking. Wear acid-resistant gloves, clothing and eye protection. Pour battery electrolyte only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
	Notes on battery	All models	AH54.10-P-0001-01A	
1	Turn ignition key to position "0"	to avoid fault codes.		
2	Disconnect ground cable (1) from battery	To prevent unintended contact, insulate the ground lead cable lug.	AR54.10-P-0003A	
3	Remove protective shield at positive pole of battery and remove all lines attached to positive cable (2)			
4	Disconnect positive cable (2) from the battery (G1).			
5	Remove seal (3) at shield (4)			
6.1	Unscrew bolt for securing generator line to shield	As of VIN A145273, X708319.		
7	Slacken retaining clip at side of shield (4), guide all lines through shield and lay to one side			
8.1	Detach coolant circulation pump (M13) from shield	As of VIN A145273, X708319.		
9	Remove cable strap at lines at side of shield			
10	Detach overflow hose (8) and control cable (9) at shield			
11.1	Detach locking bracket of suction fan (10) at the front from the shield and remove line from shield	Only if fitted.		
12	Unscrew bolt (11) at shield		*BA54.10-P-1002-01A	
13	Remove clamping wedge (12) at retaining bracket			
14	Detach retaining bracket (13) by pressing downwards			
15	Detach and remove shield (4)	Rotate the shield forwards and move back in order to loosen the front retaining lugs.		
16	Remove battery (G1).			
17.1	Dispose of battery	If battery is defective.		
	Dispose of battery	All models	OS54.10-P-0001-01Z	
18	Install in the reverse order			

Nm Battery

Number	Designation	Model Series 163
BA54.10-P-1002-01A	Bolt of shield to body	Nm 20