


MODEL 163.136 /154 /172 #A as of 145273,  
 163.136 /154 /172 #X as of 708319,  
 163.113 /128 /157 /174 /175

- 2 Extended-Activity-Module (EAM)
- 3 Retaining lugs
- 4 Removal tools
- 5 DAS control module

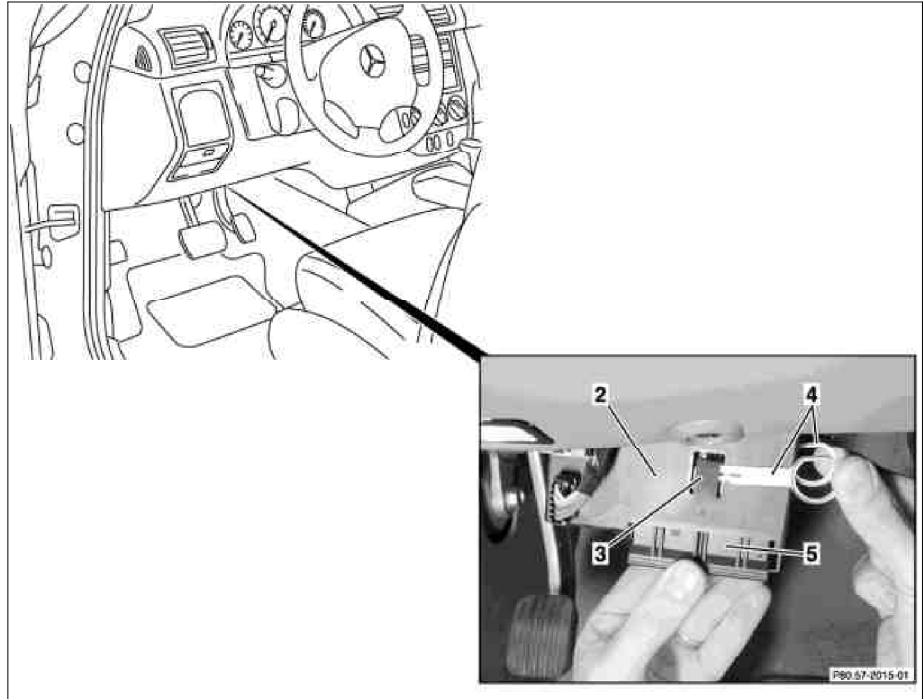

P54.21-2099-06

☒ ☒	Remove/install		
1	Remove Extended-Activity-Module (EAM) (2)		AR54.21-P-1200GH
2	Loosen the retaining lugs (3) which hold the DAS control module (5) in the EAM	<p>ⓘ Ensure that the retaining lugs do not break off.</p> <p>ⓘ Use radio removal tools (4) for removal.</p>	
3	Remove the DAS control module from the EAM	<p>ⓘ Before installing a new DAS control module, determine in the old DAS control module whether keys are banned and code suitably in the new DAS control module.</p> <p>ⓘ <b>Note:</b> The chassis number must be stated when ordering a new control module.</p>	
4	Install in the reverse order		
5	Move ignition key into position 1 for at least 40 seconds		
6	Check whether the vehicle can be started with all keys		