


MODEL 163.136 /154 /172 #A as of 145273,  
 163.136 /154 /172 #X as of 708319,  
 163.113 /128 /157 /174 /175

- 1 Lock
- 2 Extended-Activity-Module (EAM)

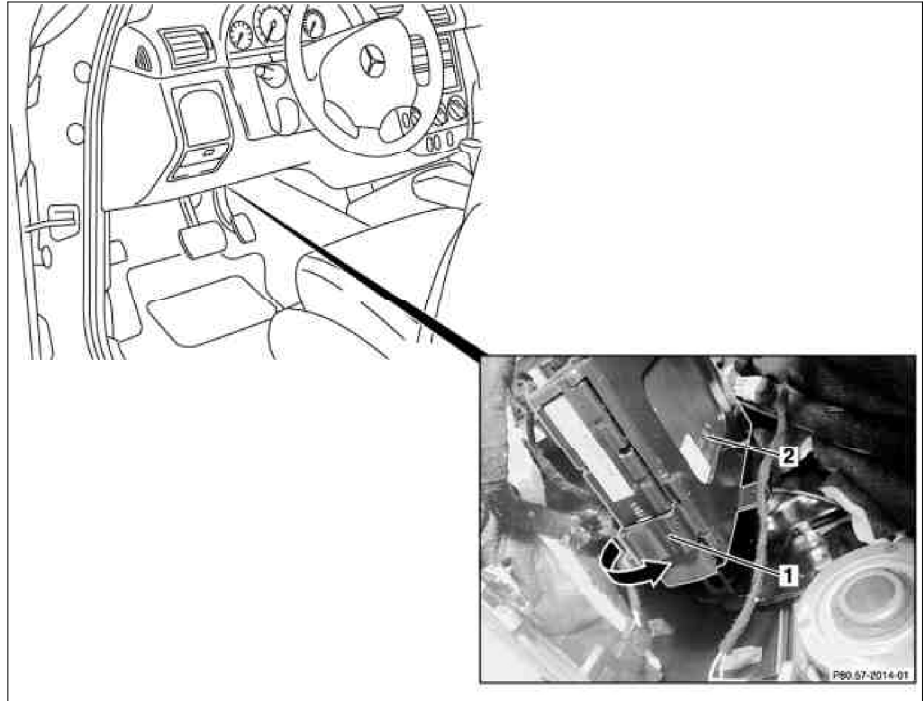

P54.21-2098-06

☒ ☒	Remove/install		
1.1	Read out coding of Extended-Activity-Module (EAM)	<b>i</b> Only when replacing the EAM and if it can still be read out using STAR DIAGNOSIS.	
2	Remove cover under the instrument panel (left)		AR68.10-P-1500GH
3	Loosen the lock (1) which secures the EAM in the bracket		
4	Remove the Extended-Activity-Module (EAM) (2) downwards out of the bracket		
5	Disconnect connectors		
6	Remove drive authorization module		AR54.21-P-1300GH
7	Install in the reverse order		
8.1	Code the EAM	<b>i</b> Only when installing a new EAM.	AR54.21-P-1200-01GH
9	Turn ignition key into position 1 and wait for 40 seconds before first starting the engine.		