



MODEL 163.113 #A as of 289565,
 163.113 #X as of 754620,
 163.154 #A as of 289565,
 163.154 #X as of 754620,
 163.128 /157 /175

- 1 Filler cap
- 2 Bolt
- 3 Hinge
- 4 Bolts

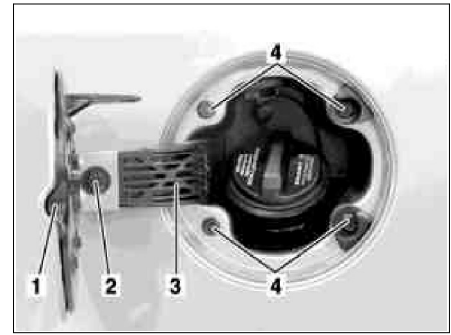


P47.30-2044-01

- 5 Vent lines
- 6 Filler neck
- 7 Screws
- 8 Bracket
- 9 Clip
- 10 Screw
- 11 Fuel vapor expansion reservoir
- 12 Rubber seal

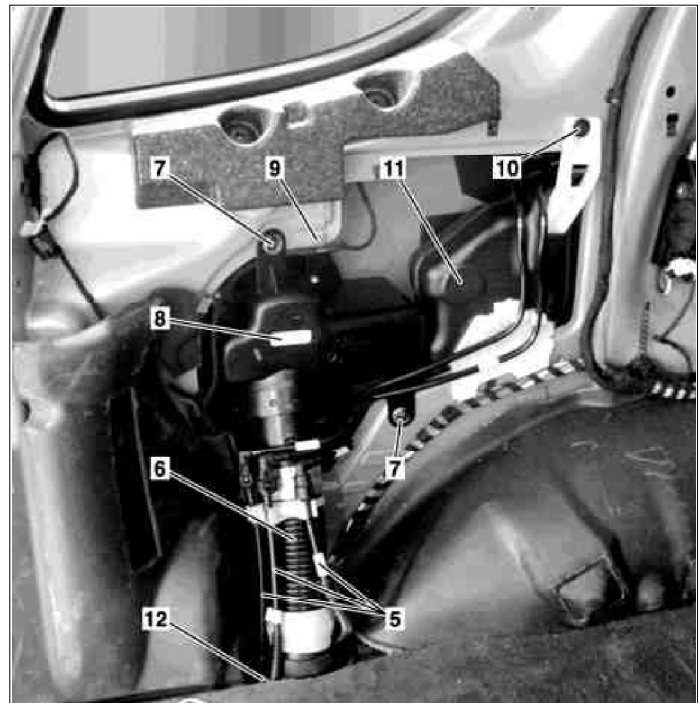

P47.30-2045-12

|  | Remove/install | | |
|--|---|---|--------------------|
| ⚠ Danger! | Risk of explosion from fuel igniting, risk of poisoning from inhaling and swallowing fuel as well as risk of injury to eyes and skin from contact with fuel. | Fire, sparks, open flames or smoking forbidden. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel. | AS47.00-Z-0001-01A |
| 1 | Remove filler cap (1) | i Installation: Install bolt (2) with locking agent. Adjust the filler cap correctly. | |
| 2 | Position the hinge (3) in the closed position | | |
| 3 | Unscrew bolts (4) on filler neck | | |
| 4 | Remove paneling on the C-pillar | | AR68.30-P-4490GH |
| 5 | Separate vent lines (5) from filler neck (6) | | |
| 6 | Remove bolts (7) from filler neck bracket (8) | | |
| 7 | Remove wiring clip (9) from the body | i Installation: Route the wiring behind the bracket (8). | |
| 8 | Remove bolt (10) on fuel vapor expansion reservoir (11) | i Installation: Insert bolt (10) with locking agent. | |
| 9 | Pull fuel vapor expansion reservoir forwards | | |
| 10 | Loosen sealing rubber (12) on filler neck (6) on vehicle floor | | |
| 11 | Take filler neck with bracket out of C-pillar | i by bending to and fro. | |
| 12 | Take fuel vapor expansion reservoir (11) out of C-pillar | | |

| | | | |
|----|------------------------------|--|--|
| 13 | Install in the reverse order | | |
|----|------------------------------|--|--|