


MODEL 163.136 /154 /172 up to 31.8.99

- 1 Screw
- 2 Bottom section of engine hood lock
- 3 Engine hood control cable mount
- 4 Screw
- 5 Upper section of engine hood lock with safety hook

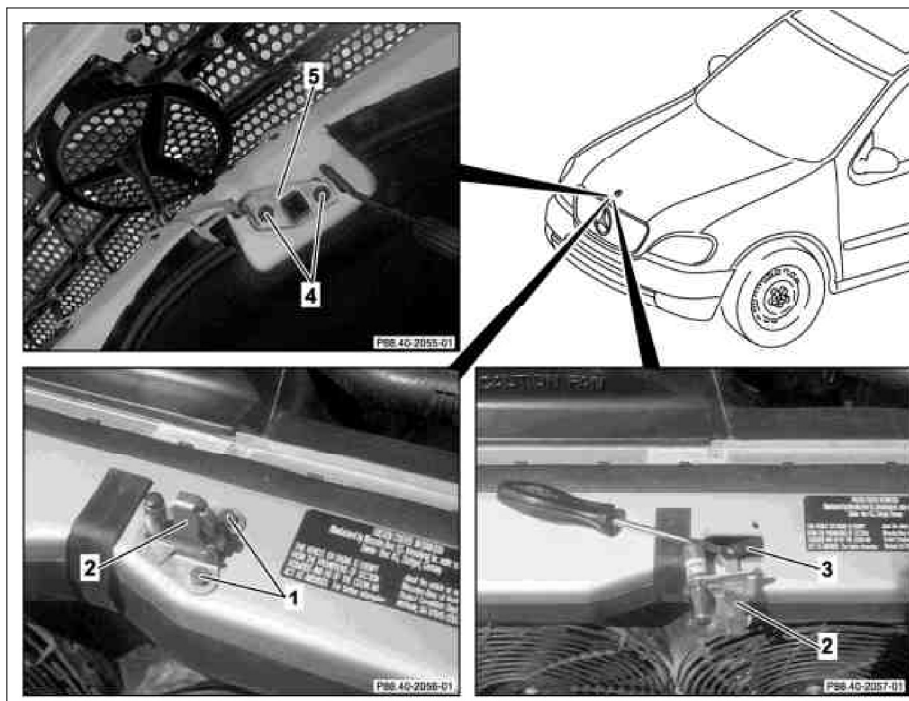

P88.40-2054-06

	Removal, installation		
1	Open engine hood and position upright	Up to 08.99 As of 09.99	AR88.40-P-1000GH AR88.40-P-1000GI
2	Unscrew screws (1) and remove upper section of engine hood lock (2) upward		*BA88.40-P-1003-01C
3	Remove release lever on inside of vehicle and unhook engine hood cable from lever		
4	Unhook engine hood cable from bottom section of engine hood lock (2)	Pull engine hood cable out slightly. Press holder (3) on engine hood cable carefully off engine hood lock.	
5	Remove bottom section of engine hood lock (2)	Installation: Ensure that engine hood cable is routed carefully.	
6	Unscrew screws (4) and remove upper section of engine hood lock (5)	Mark installation position of upper section of engine hood lock on engine hood. 	*BA88.40-P-1004-01C
7	Install in opposite order		
8	Lubricate engine hood lock		AP88.40-P-8821GH
9	Check for proper function		
10	Check safety hook for proper function	For this purpose, close engine hood, release and check arrest on radiator cross member	
11	Check engine hood fit	If necessary#	
		Adjust engine hood	AR88.40-P-3020GH

Engine hood

Number	Designation		Model 163
BA88.40-P-1003-01C	Screw for engine hook lock on radiator cross member	Nm	12
BA88.40-P-1004-01C	Screw for engine hood lock upper section on engine hood	Nm	12