


MODEL 163.136 /154 /172 #A as of 145273,
163.136 /154 /172 #X as of 708319,
163.113 /128 /157 /174 /175

- 1 Screws
- 2 Engine hood lock bottom section
- 3 Engine hood control cable
- 4 Electrical connector
- 5 Screws
- 6 Engine hood lock top section

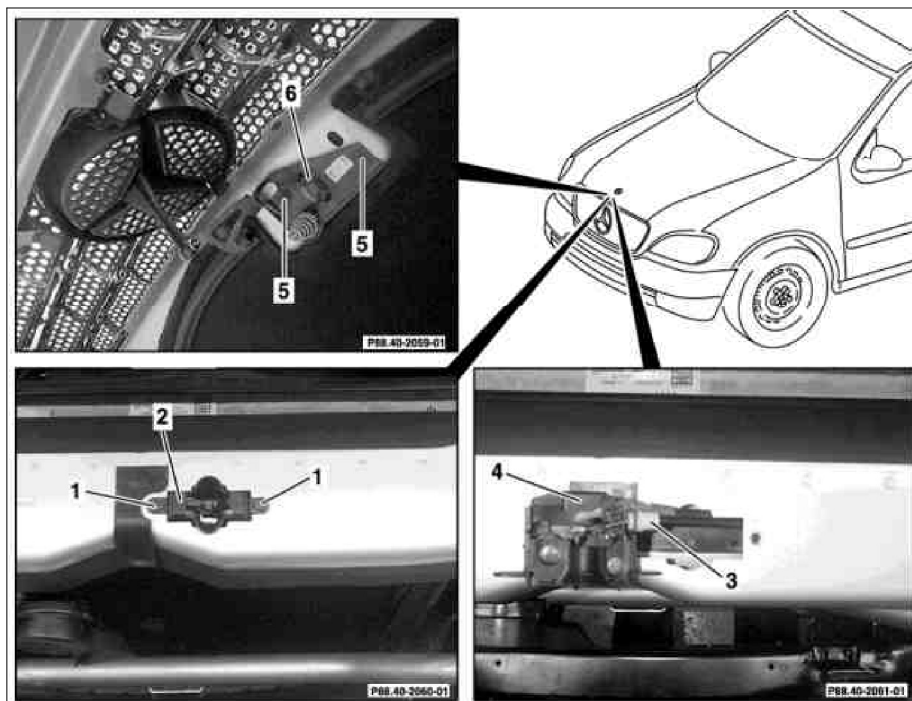

P88.40-2058-06

🔄	🔍	Removing and installing		
1		Open engine hood and raise to vertical position		AR88.40-P-1000GI
2		Unscrew screws (1) and remove engine hood lock bottom section (2) upward	Nm	*BA88.40-P-1003-01C
3.1		Disconnect electrical connector (4) from engine hood lock bottom section (2)	i Only when equipped with ATA.	
4		Unhook engine hood control cable (3) from engine hood lock bottom section (2)	i Pull out engine hood control cable slightly.	
5		Remove engine hood lock bottom section (2)	i Installation: Ensure that engine hood control cable is routed carefully.	
6		Unscrew screws (5) and remove engine hood lock top section (6)	i Mark installation position for engine hood lock top section on engine hood. Nm	*BA88.40-P-1004-01C
7		Install in the reverse order		
8		Check alignment of engine hood	i If necessary:# Adjust engine hood	AR88.40-P-3020GH
9		Lubricate engine hood lock Lubricate hood lock, safety hook and hinges		AP88.40-P-8821GH
10		Perform function check		
11		Check function of safety hook	i For this purpose, close engine hood, unlock and check arrest on radiator cross member.	

Nm Engine hood

Number	Designation		Model 163
BA88.40-P-1003-01C	Screw for engine hood lock on radiator cross member	Nm	12
BA88.40-P-1004-01C	Screw for engine hood lock top section on engine hood	Nm	12