


Workshop equipment/MB testers (see Workshop Equipment Manual)**Shown on model 210**


0100 STAR DIAGNOSIS
X11/4 Data link connector

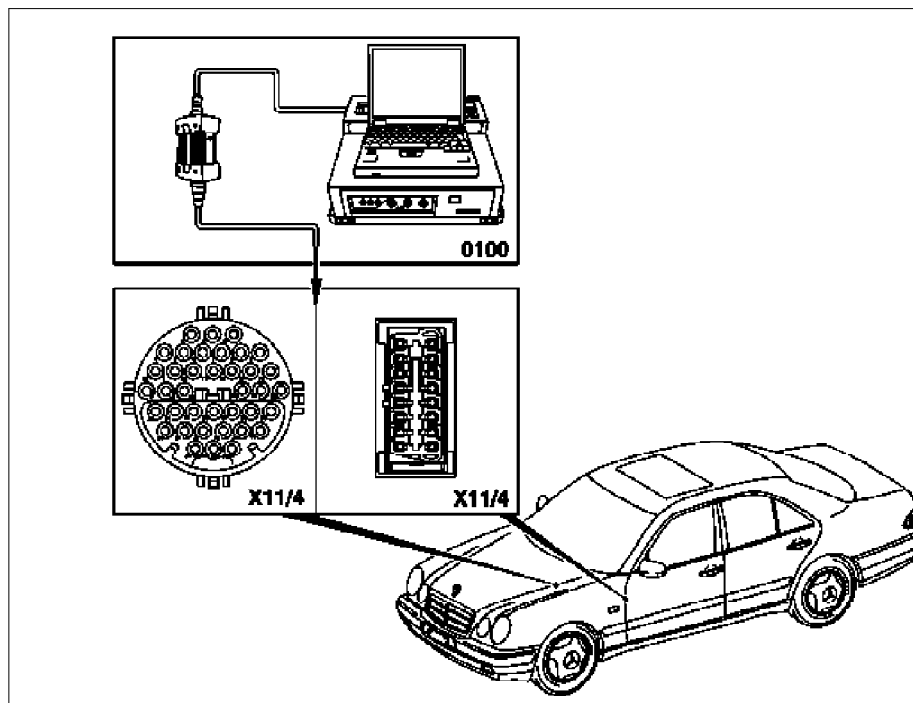

P00.30-2002-06


Illustrated on model 163

0100 STAR DIAGNOSIS
X11/4 Data link connector

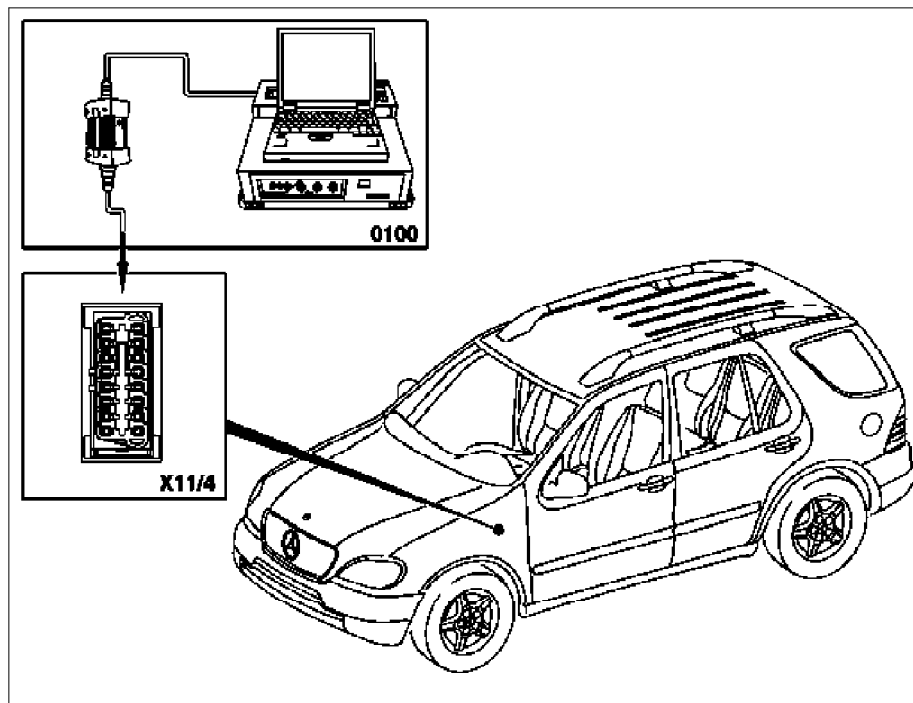


P00.30-2005-06

Shown on model 461.302
 0100 STAR DIAGNOSIS
 X11/4 Data link connector

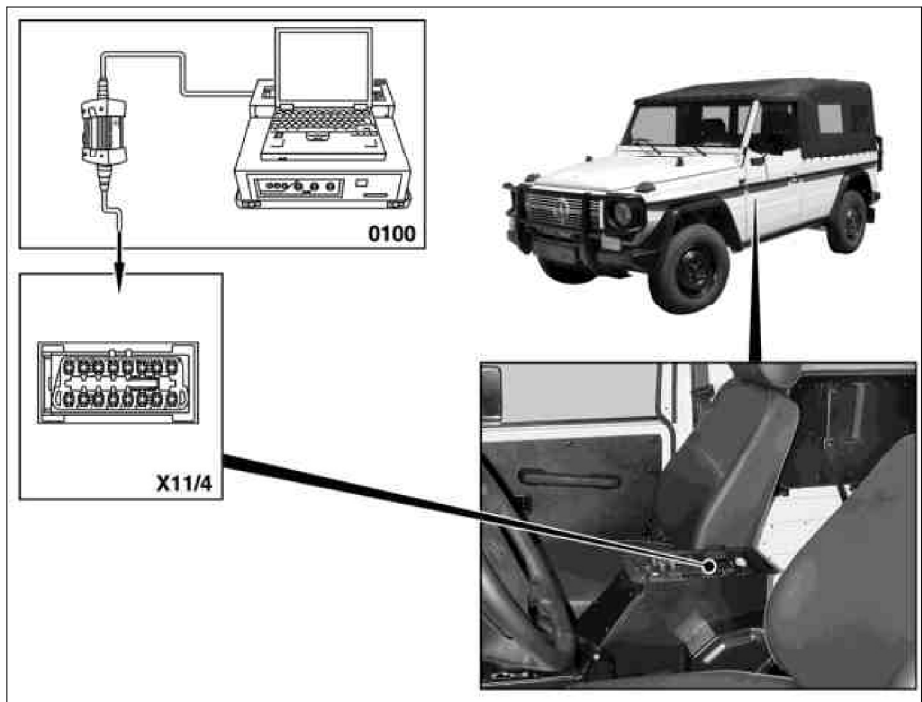

P00.00-3388-06

Shown on model 171.4
 0100 STAR DIAGNOSIS
 X11/22 Data link connector (1.3)

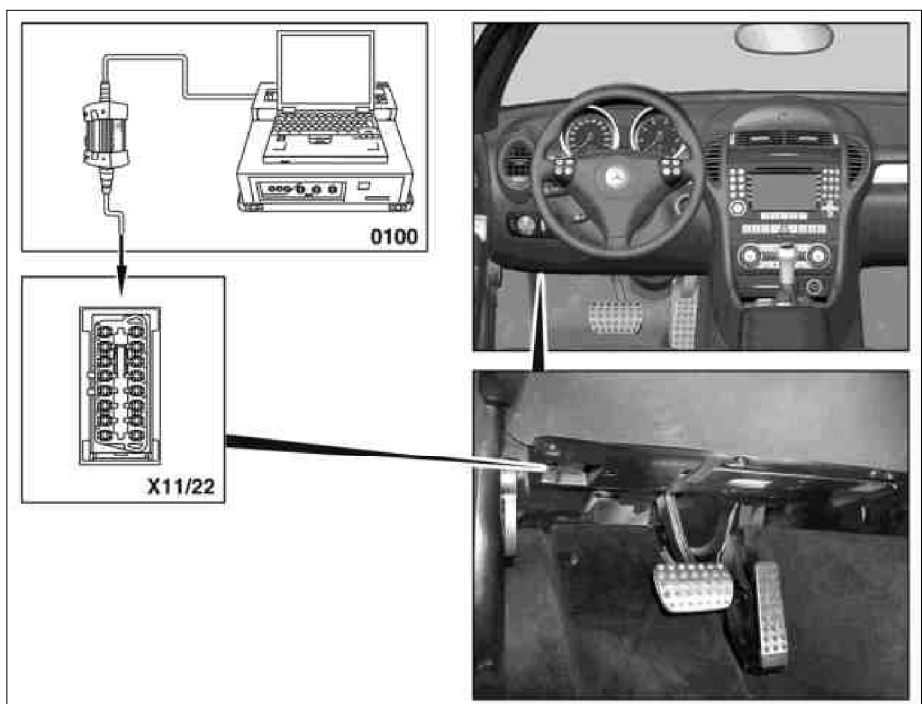

P00.30-2028-06

- 1 Connect STAR DIAGNOSIS (0100) to the data link connector (X11/4) or the data link connector (1.3) (X11/22).
- 2 Switch on ignition.
- 3 Start the Diagnosis Assistance System.
- 4 In the "Model designation" menu select the "Additional model designation" submenu.
- 5 Follow the instructions on the screen:
 D Enter new control unit version.
 D Read fault memory, erase
 D Read actual values.
 D Perform actuations.
 D Adaptation of control units.
- 6 Disconnect STAR DIAGNOSIS (0100).

i Stored faults which may be caused by disconnecting cables or by simulation during testing operations must be deleted in the diagnostic trouble code memory following completion of the operations.