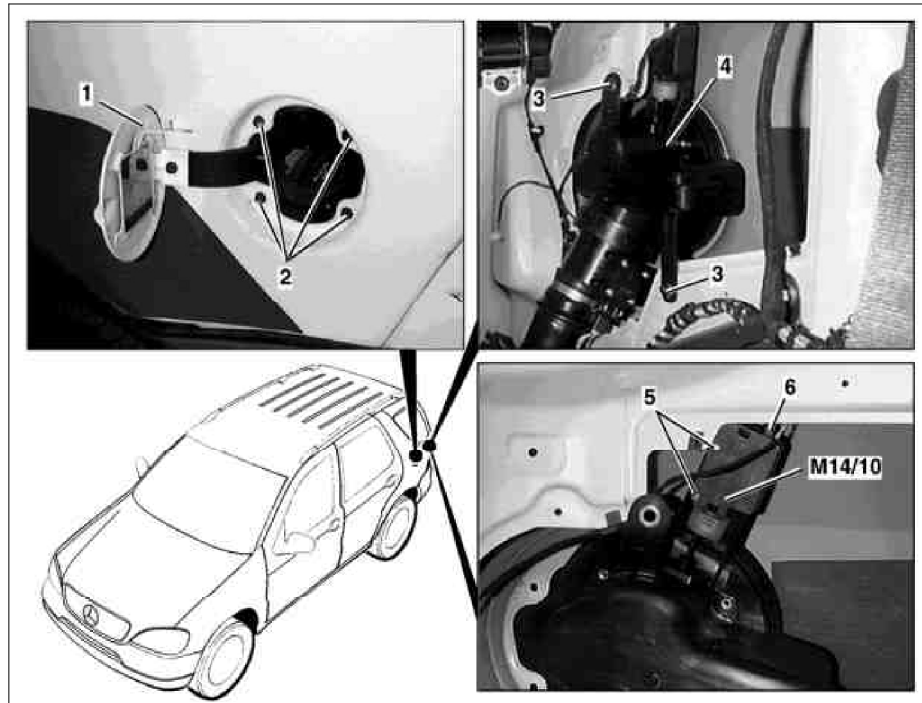


 


 


MODEL 163

- 1 Fuel filler flap
 2 Outer screws
 3 Inner screws
 4 Fuel filler fitting
 5 Screws
 6 Connector
 M14/10 Filler flap CL actuating motor



P80.20-0478-06

 	Removal, installation		
1	Remove paneling on C-pillar	 Remove paneling on left C-pillar	AR68.30-P-4490GH
2	Remove fuel filler flap (1)		
3	Unscrew outer screws (2) on fuel filler	 When installing: Ensure that rubber seal is properly seated	
4	Unscrew inner screws (3) on fuel filler		
5	Unscrew filler flap CL actuating motor (M14/10)	 Push filler fitting to right and unscrew screws from filler flap CL actuating motor	
6	Disconnect connector (6)		
7	Reinstall in opposite order		
8	Check for proper function	 Actuate central locking with fuel filler flap open	