


## MODEL 163.113

- 1 Noise encapsulation, front section  
 2 Insulation cubes  
 3 Scribe line, horizontal  
 4 Scribe line, vertical  
 5 Area to be removed

r 10 mm

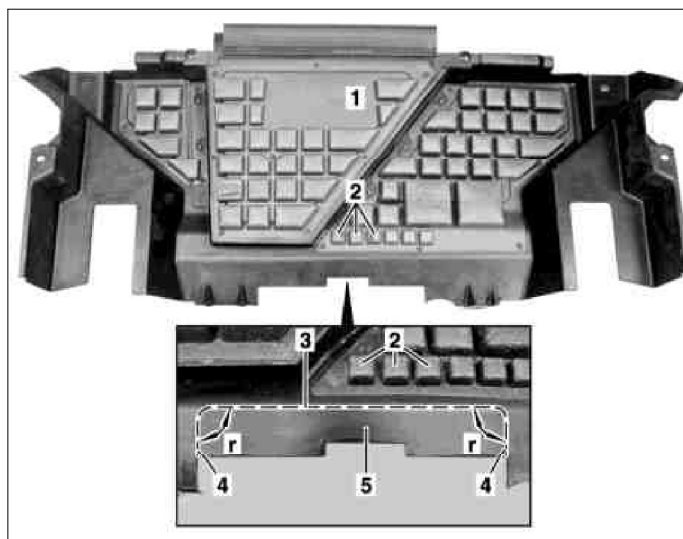

P94.30-2012-11

☒	<b>Remove</b>		
1	Remove noise encapsulation <b>front</b> section (1)	<b>i</b> Do NOT remove other encapsulation sections.	AR94.30-P-5400GH
	<b>Modify</b>		
2	Flatten insulation cubes (2)		
3	Scribe two 38 mm <b>vertical</b> lines (4) forward from rear edge of encapsulation	<b>i</b> Vertical scribe lines should be flush with outside edges of rear cutout in encapsulation.	
4	Scribe a straight, horizontal line (3) between vertical lines		
5	Radius forward corners of scribe lines to 10 mm (r)		
6	Remove area (5) of encapsulation bordered by scribe lines		
☒	<b>Install</b>		
7	Reinstall noise encapsulation <b>front</b> section (1)		AR94.30-P-5400GH