

AR46.40-P-0200-02C	Pressing out and attaching track rod joint at steering knuckle	
k	Surface protection on track rod screw connection to steering knuckle modified	BT46.40-P-0001-01A

Modification notes


24.3.99	Surface protection on track rod screw connection to steering knuckle modified	Model 210	BT46.40-P-0001-01A
		New tightening torques incorporated	*BA46.40-P-1002-01A

Track rod


Number	Designation	Model 210
BA46.40-P-1002-01A	Self-locking nut, track rod to steering knuckle	yellow Nm 60
		silver or blue Nm 70

Track rod

Number	Designation	Model 163
BA46.40-P-1001-01C	Self-locking nut, track rod to steering knuckle	Nm 55

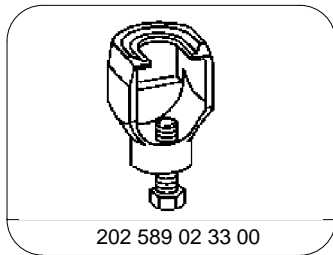

Puller

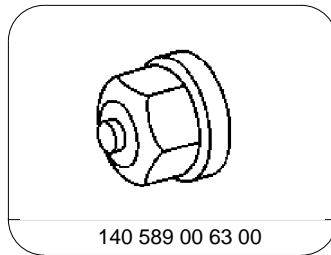


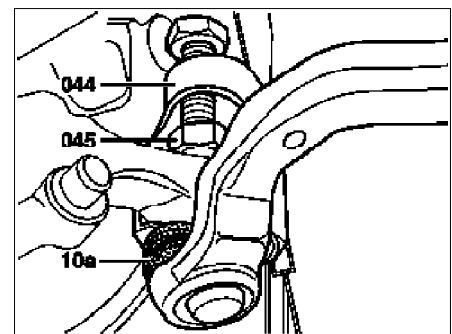
Thrust piece

Pushing off

- 1 Remove self-locking nut of track rod joint.
- 2 Fit thrust piece (045).
- 3 Use puller (044) to press off track rod joint (10a).
- 4 Remove puller and thrust piece.

Install

- 5 Clean conical joint.
- 6 Install new self-locking nut and tighten . Counter ball head with an Allen wrench if necessary.



P46.40-0240-01