


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

10i	Clamp nut
11	Boot
11a	Inner clamp nut
11b	Outer clamp
23k	O-ring

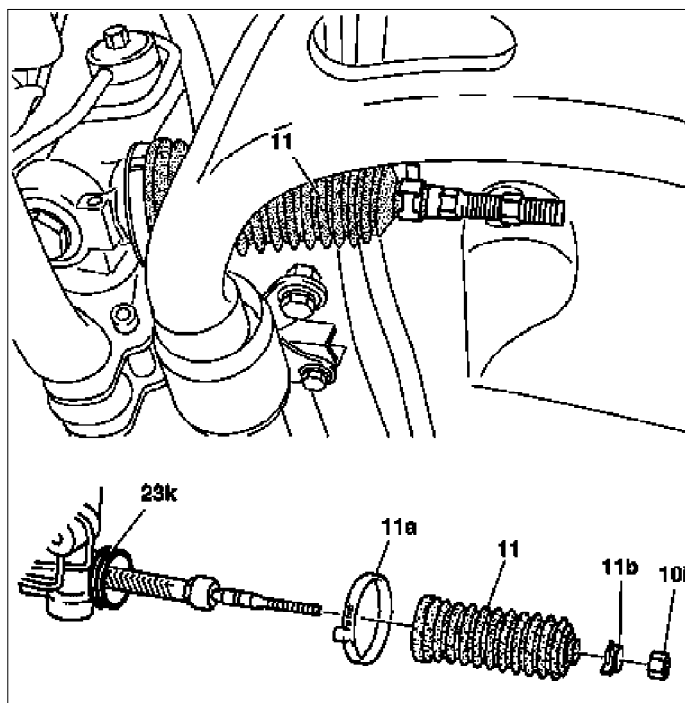

P46.40-0263-12

☐	Inspect		
1	Check bellows (11)	<p>ⓘ Never check bellows by pressing in or around the bead, as this leaves behind damage to the plastic and results in leaks in the long-term.</p> <p>ⓘ Because the seals on the rubber boots must be absolutely tight and leak-free to ensure that the steering rack continues to provide reliable operation, a visual inspection should be carried out as follows:</p> <ul style="list-style-type: none"> D Raise vehicle at the front axle D Extend the bellows by turning the steering onto left or right lock and in the process check for damage (cracks, chafing marks and intrusions) and replace if necessary. 	
☒ ☒	Remove/Install		
2	Remove track rod		AR46.40-P-0200GH
3	Unscrew clamping nut (10i)		
4	Detach outer clamp (11b)		
5	Detach inner clamp (11a)		AR46.40-P-0400-01GH
6	Pull off bellows (11)		
7	Replace O-ring (23k)		
8	Check steering rack and inner tie rod thrust joint for corrosion and play	<p>ⓘ If the rack is already corroded and the steering has a leak as a result, it is then necessary to replace the complete rack-and-pinion steering:# Remove/install rack-and-pinion steering</p> <p>ⓘ If axial joint is worn, replace the inner track rod:# Remove/install inner tie rod with axial joint</p>	AR46.20-P-0600GH AR46.40-P-0201GH
9	Install in the reverse order		