


Remove

- 1 Remove inner clamping collar (11a) with side-cutting pliers.

Install

- 2 Mount new clamping collar (11a) and tension using conventional clamp pliers.
- 3 Check hose clamp (11a) for correct seat.

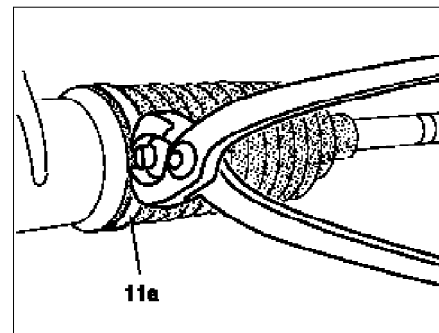

P46.40-0264-01