


- 1 Check inside and outside of wheel for dirt and clean wheel if necessary.
- 2 Check contact surface of rim for dirt and clean if necessary.
- 3 Check centering, spherical caps and rim flanges for damage. The spherical caps must be free of grease.

**Light-alloy rims**

- 4 The rim flanges on light-alloy rims may exhibit increased levels of wear under the following conditions:  
High loads, operation with a trailer, insufficient tire inflation pressure, use of non-approved tire makes or versions, contamination with dirt, sand and road salt.
- 5 The wear (X) must be no more than 1 mm.

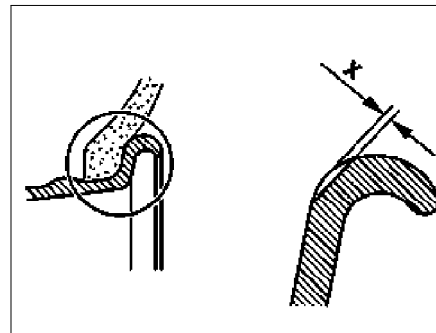

P40.10-0259-01