


MODEL 163.113 /136 /154 /172 /174 up to 31.8.01

- 1 Frame
- 2 Mirror housing paneling
- 3 Catches in mirror housing
- 4 Outer catch
- 5 Bolt
- 6 Clips

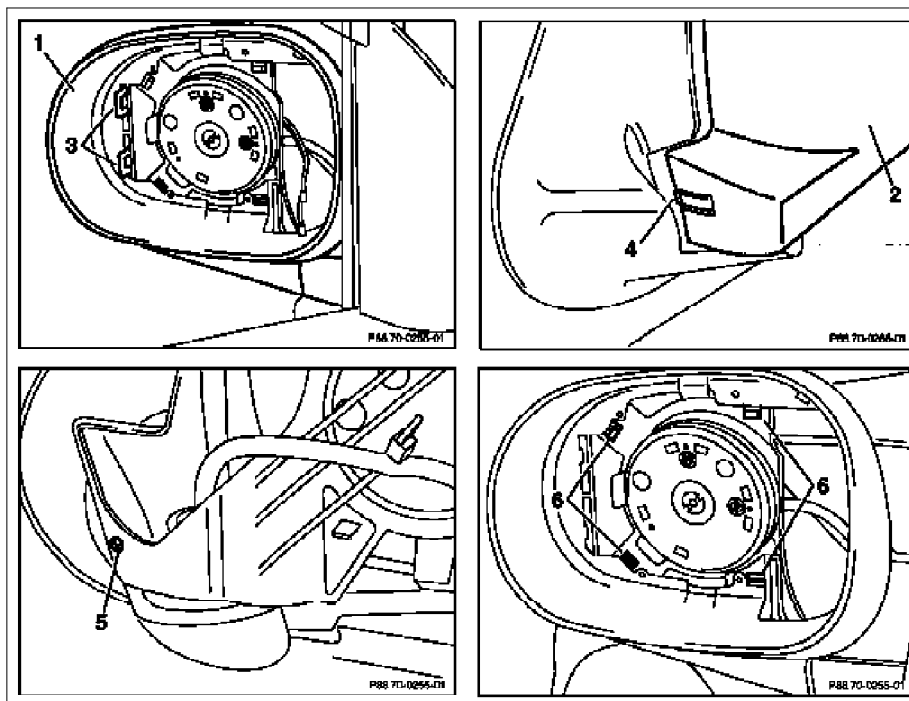


P88.70-0255-06

## Operation no. of operation texts or standard texts and flat rates

| Range | Op. no. | Operation text  |
|-------|---------|---|
| P     | 883424  | REPLACING HOUSING FOR LEFT OUTSIDE REARVIEW MIRROR                    |
| P     | 883425  | CONVERTING HOUSING FOR LEFT OUTSIDE REARVIEW MIRROR (MIRROR REMOVED)  |
| P     | 883427  | REPLACING HOUSING FOR RIGHT OUTSIDE REARVIEW MIRROR                   |
| P     | 883428  | CONVERTING HOUSING FOR RIGHT OUTSIDE REARVIEW MIRROR (MIRROR REMOVED) |
| P     | 883430  | REPLACING HOUSINGS FOR BOTH OUTSIDE REARVIEW MIRRORS                  |

|   | Remove/install   |  |                  |
|---|--|--|------------------|
| 1 | Remove mirror glass                                    |  | AR88.70-P-9020GH |
| 2 | Release catch in mirror housing (3)                    | Press mirror housing out of frame (1) with slight pressure                           |                  |
| 3 | Release paneling for mirror housing (2) from frame (1) | Outer catch (4) only accessible if mirror housing is pivoted toward door             |                  |
| 4 | Remove mirror housing paneling (2)                     |  |                  |
| 5 | Unscrew screw (5) from frame (1)                       | Torx bit set   | *000589011000    |
| 6 | Unclip frame (1) from mirror actuator motor            | Pivot mirror housing back to initial position. Unclip clips (6) from actuator motor. |                  |
| 6 | Remove frame (1)                                       |  |                  |
| 7 | Install in the reverse order                           |  |                  |

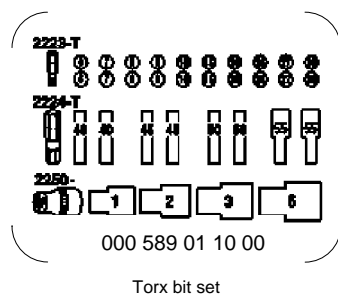

Torx bit set