

Commercially available tools (see Workshop Equipment Manual)


Number	Designation	Make (e. g.)	Order number
WH58.30-Z-1010-10A	Cutting tool kit (compressed-air tool + blades)	<p>Europe: The Barn Holly Tree Farm Holmes Chapel Road Lower Withington, Cheshire, SK11 9DT England Tel.: +44 1477 571700</p> <p>Japan: Osaka Chamber of Commerce 2-8 Hommachibashi Chuo-ku Osaka, Japan, 540- 0029 Tel.:+81 6 6944 6445</p> <p>USA: SPX Dealer Equipment Services Tel.: +1-888-458-4040</p>	

ⓘ Observe general notes, guidelines and safety precautions for operation of pneumatic tools contained in the operating instructions, included with the tool kit to avoid hazards and incorrect operation.

ⓘ Sharpen blades before use and while cutting with wet whetstone WK8 to obtain best results.

Detach detachable components from front fender, rear fender and tailgate with the following blades:

- Blade WK24ZV (5) with adjustment arm WK11B (6) when using pneumatic tool WK10HD (3).
- Blade WK24S (1) or WK6 with handle WK7 (2) for manual use.

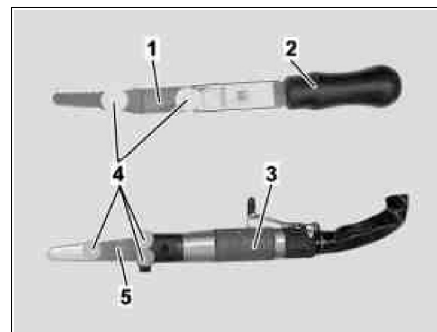


P88.30-2070-01

1 Attach felt pads (4) at the bottom of the pneumatic tool (vehicle side) as well as the back of the blade to protect the paint work.

2 Adjust cutting depth with adjustment arm WK11B (6).

ⓘ To separate the detachable components from the front fender and rear fender, adjust rear adjustment arm WK11 to a=25 mm, on tailgate to a=40 mm.

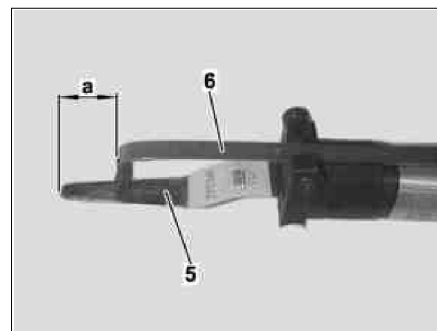

P88.30-2071-01

3 Set compressed air valve to p=6 bar for operation of pneumatic tool and turn power control on tool to position 1/2 - 2/3.