








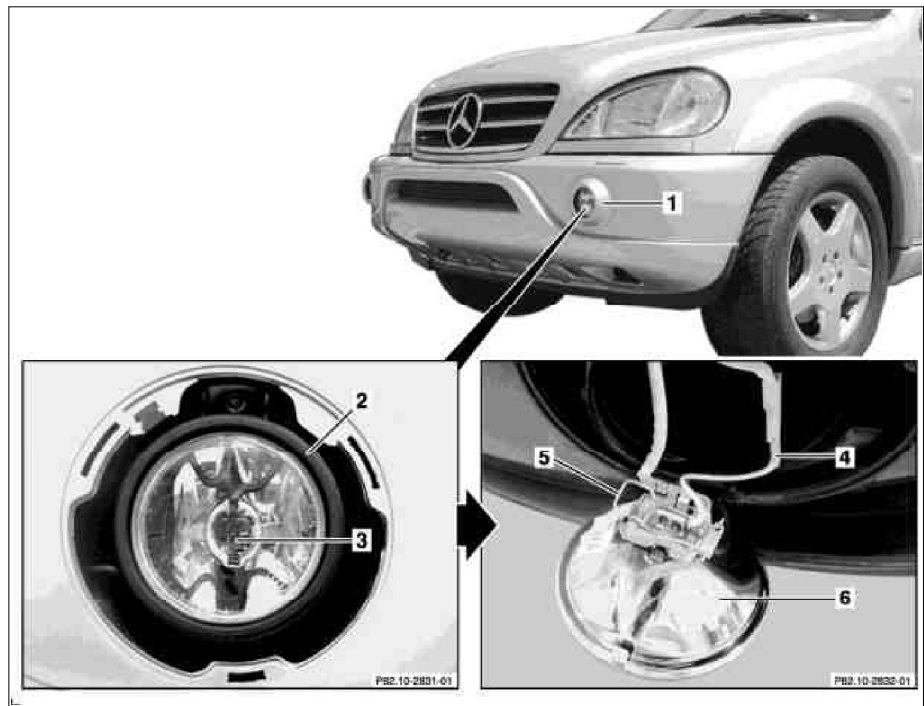

MODEL 163.113 /128 /136 /154 /157 /172 /175 with CODE (U49) Styling package


MODEL 163.174

- 1 Cover
- 2 Bulb housing
- 3 Bulb
- 4 Connector
- 5 Locking mechanism
- 6 Fog lamp insert



P82.10-2833-06

 	Remove/install		
1	Remove cover (1) from bumper	 Do not break retaining lugs.	
2	Remove bulb housing (2)	 To unlock, rotate counterclockwise.  Installation: Ensure that the locking device has locked securely.	
3	Remove fog lamp insert (6) from housing	 Installation wedge	*115589035900
4	Disconnect connector (4)		
5	Remove bulb on the back of the fog lamp insert (6)	 Do not hold the bulb with bare fingers, as fingerprints bake and leave behind opaqueness on the bulb. Use a soft, lint-free cloth.  Lock securely.	
6	Install in the reverse order		

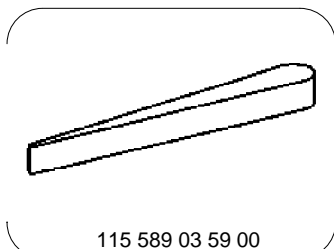

115 589 03 59 00

Longitudinal wedge