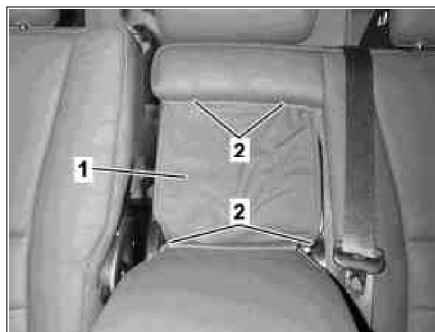
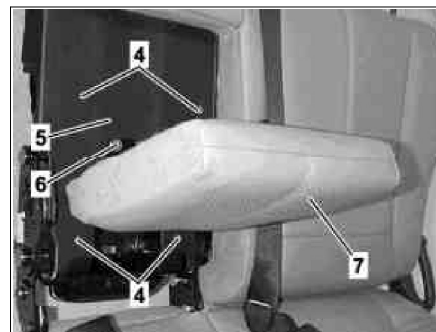


**MODELS 163.136 /154 /172 as of 1.9.99,  
163.113 /128 /157 /174 /175**






- 1 Fabric covering
- 2 Fastening points for fabric covering
- 4 Bolts
- 5 Armrest paneling
- 6 Fixing rivet
- 7 Armrest



P91.12-2131-01



P91.12-2132-01

	Remove/Install		
1	Fold down armrest (7)		
2	Detach fabric cover (1)	 Carefully unhook wires inserted at the fastening points at the top and bottom of the fabric covering (2).	
3	Remove upholstery below the armrest	 Unscrew 2 bolts on the bottom of the rear side, and turn upholstery upwards, in order to detach locating tab at the rear.	
4	Unscrew screws (4) and remove paneling of armrest (5)	 Carefully unhook retaining clip on the outside of the armrest paneling.	
5	Remove fixing rivet (6) from the armrest mounting		
6	Detach armrest bracket from the mounting on the rear backrest frame	 Press armrest mount upwards	
7	Remove armrest (7) forwards		
8	Install in the reverse order		