


**MODELS 163.136 /154 /172 as of 1.9.99,
163.113 /128 /157 /174 /175**

- 1 Rear backrest release cable
- 2 Adjuster
- 3 Screws
- 4 Bolts
- 5 Rear backrest fitting

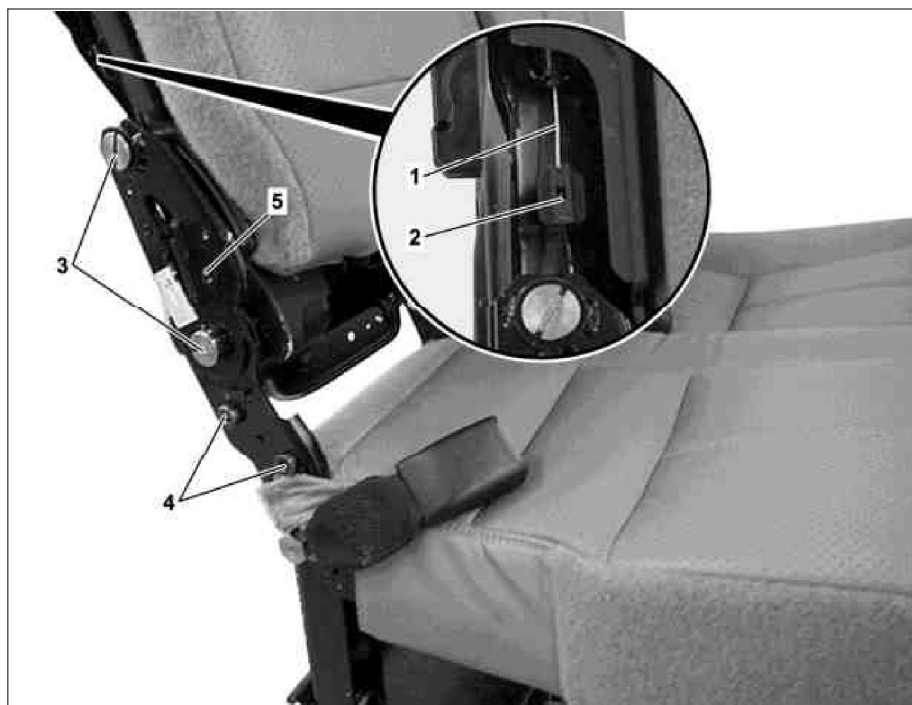


P91.12-2133-06

	Remove/Install		
1	Remove side covers at rear backrest fitting (5)		
2	Detach rear seat backrest release cable (1) at adjuster (2)	Mark adjustment position on the thread. Turn the adjuster counterclockwise until the rear backrest release cable can be unhooked.	
3	Unscrew bolts (3) from rear backrest fitting	With 60% rear seat: Unscrew bolts (3) at the same time in order to prevent the rear backrest fitting from tipping. 	*BA91.12-P-1006-03A
4	Unscrew bolts (4) from rear backrest fitting	 Torx bit set	*BA91.12-P-1007-03A *000589011000
5	Remove backrest fitting (5)		
6	Install in the reverse order	Installation: check unlocking function of folding rear backrest.	

Rear seats

Number	Designation		Model 163 as of 09/99
BA91.12-P-1006-03A	Bolt from backrest fitting to backrest	Nm	30
BA91.12-P-1007-03A	Screw for backrest fitting on seat frame	Nm	30

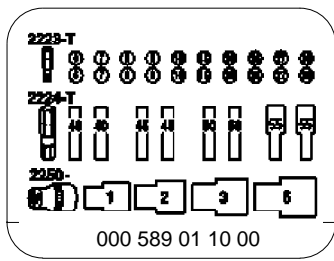

Torx bit set