

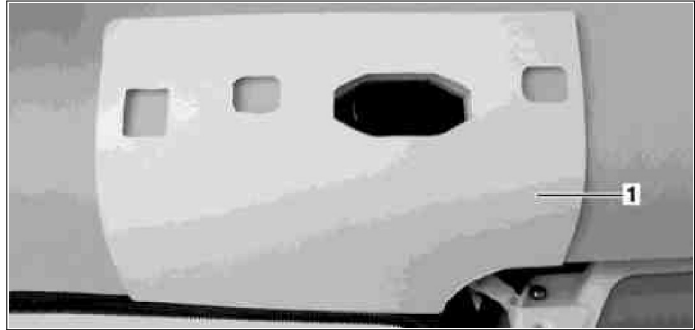



AN68.30-P-0001-02B	Modify roof paneling for installing handle and clamping strap mount	Model 163.113 /154 #A as of 289565, Model 163.113 #X as of 754620, Model 163.128/ 157/ 175 with code (847), 3rd seat row	
--------------------	---	---	--

- 1 Remove accessory hook.
- 2 Position template (1) to roof paneling.
-  Fasten template with adhesive tape.
- 3 Mark points which must be cut out for installing pivot handle and clamping strap.
- 4 Remove template (1).



P68.30-2527-10

- 5 Cut out cutouts for pivot handle and clamping strap mount.
-  Do not cut into window airbag or wiring harness.
- 6 Repeat on opposite side. .
- 6 Install accessory hook (2), clamping strap mount (3) and handle (4).
- 7 Repeat on opposite side. .

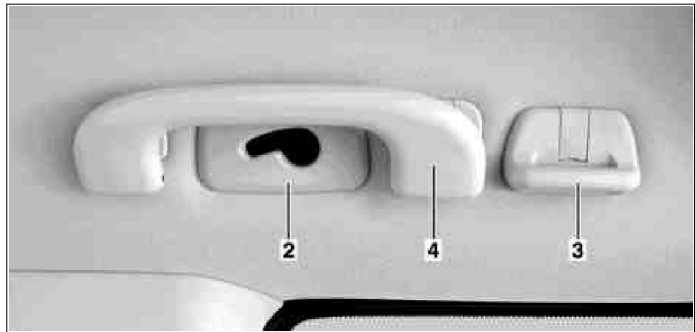

P68.30-2528-10