

- 1 Position outer holes of template (1) over center of D-ring Torx fasteners on rear floor cargo compartment.
- 2 Install T40 Torx bit through each of the template outer holes into the D-ring Torx fasteners to keep template positioned correctly.

**i** Start at rear template hole, insert Torx bit, stretch out template, then insert Torx bit into front hole.


- 3 Transfer center hole dimension (2) onto carpet

- 4 Remove template (1).

- 5 Remove section (2) of carpet with knife.

**i** To gain access to the seat belt attachment point.

- 6 Repeat for opposite side.

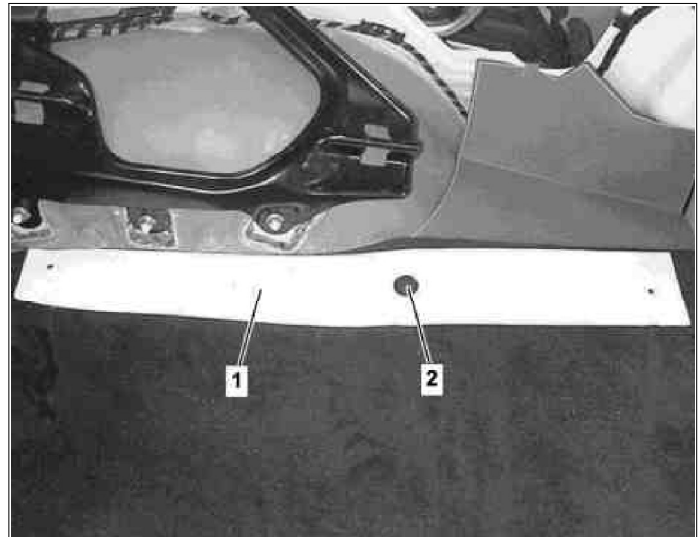

P68.30-2057-11