


MODEL 163, 203.7, 215, 230.467 /474 /475 /476 /479


Shown on model 230

- 1 Mercedes star  
2 Grommets

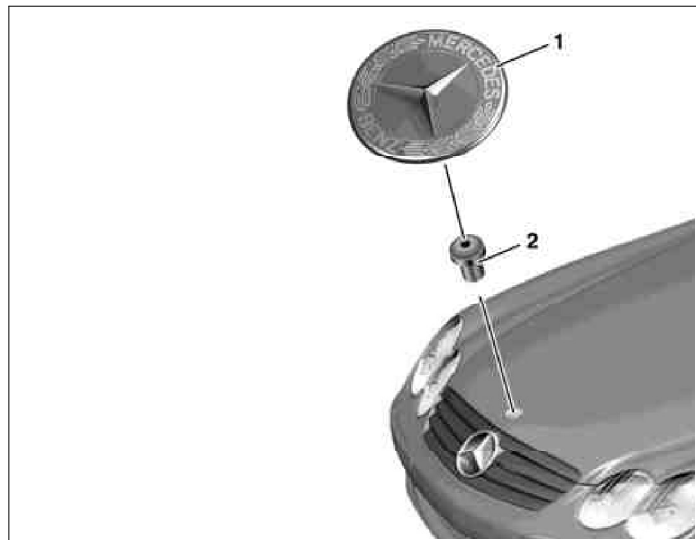

P88.40-2291-11

☒ ☒	Remove/Install		
1	Remove Mercedes star (1) from engine hood upward with long wedge (1)	<p><b>i</b> Protect engine hood around Mercedes star (1) with adhesive tape to avoid damaging paint.</p> <p><b>☑</b> Long wedge</p>	*115589035900
2	Remove grommets (2)	<p><b>i</b> Check grommets (2) and replace if required.</p>	
3	Install in the reverse order		

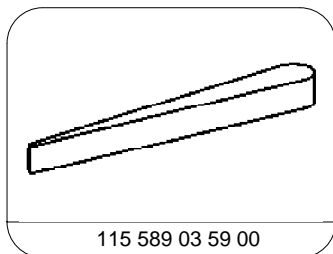

115 589 03 59 00

Long wedge