
AR88.30-P-0200-01GH	Separate detachable body components		
⚠ Danger!	Risk of poisoning after inhaling vapors or	Wear protective respiratory masks,	AS00.00-Z-0016-01A
	swallowing adhesive. Risk of injury from adhesive coming into contact with skin and	Protective gloves and safety glasses. Pour adhesive only into suitable and	
	eyes	appropriately marked containers.	

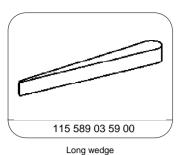

Commercially available tools (see Workshop Equipment Manual)

Number	Designation	Make (e. g.)	Order number
WH58.30-Z-1010-10A	Cutting tool kit (compressed-air tool + blades)	Europe:	
		The Barn Holly Tree Farm Holmes Chapel Road Lower Withington, Cheshire, SK11 9DT England Tel.: +44 1477 571700	
		Japan: Osaka Chamber of Commerce 2-8 Hommachibashi Chuo-ku Osaka, Japan, 540- 0029 Tel.:+81 6 6944 6445	
		USA: SPX Dealer Equipment Services Tel.:	
		+1-888-458-4040	

Remove attached part from front fender and rear fender:

Upper glued area:

- 1 Position pneumatic tool (1) on adhesive tape and insert blade between body and attached part (2).
- 2 Cut through upper bead of glue with slight up and down motions starting at front and working toward rear.
- i Insert long wedges in cut area between attached part and body to obtain better access to remaining bead of glue.

Bottom glued area:

- 3 Cut through glued points at bottom edge of front fender or rear fender with blade WK24S and handle starting at rear and working toward front.
- 5 glued points (9) on front fender, 4 glued points (10) on rear fender.




P88.30-2108-01



P88.30-2109-01


- Press off detachable body component (2) with long wedge to obtain better access to remaining glued points.
- 4 Remove attached part (2) from front fender or rear fender.

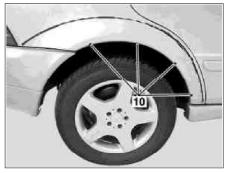

P88.30-2110-01

Remove attached part from tailgate:

- 5 Open tailgate half way and hold in this position.
- 6 Position pneumatic tool (1) on adhesive tape and insert blade between tailgate and attached part (3).

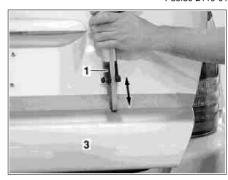

P88.30-2114-01

- 7 Cut through bead of glue starting at top all the way around with slight up and down motions until the attached part is loose.
- i Insert long wedges in cut area between tailgate and attached part (3) to obtain better access to remaining bead of glue.
- 8 Remove attached part (3) from tailgate.

- i Do not damage paint. Cut through bead of glue between body and attached part with cutting tool by moving tool up and down at an angle of 90° to bead of glue.
- Stop tool when inserting or removing blade between body and attached part.
- Flat side of blade always points in direction of body when cutting. Sharpen blade before use. When removing several detachable body components sharpen blade in between.