

MODEL 163.113 /154 /174 #A as of 289565,
163.113 #X as of 754620,
163.128 /157 /175








- 1 Armrest cover
- 2 Stowage box
- 3 Bolts
- 4 Cover on shift lever
- 5 Plastic screws

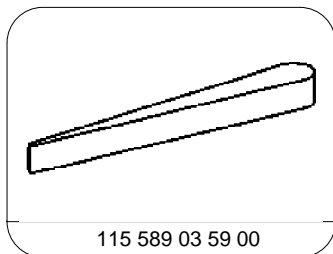


P68.20-2545-01



P68.20-2456-01

 	Remove/install		
1	Remove armrest lid (1)		AR68.20-P-2370GH
2	Remove plastic screws (5)		
3	Remove stowage box (2)	 Press the pin in the center of the rivet downwards for about 4 mm; then remove the rivet from above.	
4	Remove selector lever paneling	 Long wedge	*115589035900
5	Unscrew bolts (3)		
6	Remove cover (4) from above	 Carefully prize open at front (arrows) and at the sides.  Long wedge	*115589035900
7	Detach connector from lower control panel control module	 3 connector.	
8	Install in the reverse order		



115 589 03 59 00

Assembly wedge