

AN91.12-P-0001-04A	Installing seat console for third row of seats	Models 163.113 /128 /136 /154 /157 /172 /175 with code (847), 3rd row of seats	
--------------------	--	--	--

Nm Rear seats

Number	Designation	Model 210 up to 08/99	Model 163 as of 09/99
BA91.12-P-1004-03A	Screw for seat console in 3rd seat row on vehicle floor	Nm 18	18

- 1 Cut the perforated cut-outs (1) from the sound-insulation mat in the wheelhouse.



P91.12-2054-11

- 2 Install seat console (2) but do not tighten the bolts yet.

i Ensure that the wiring harness is not trapped under the seat console.

- 3 Install seat of the third row of seats.

- 4 Align seat with the floor.


i Move the seat console forwards and backwards until the seat locks in position gently in the locking hooks on the floor. The locking hooks on the floor can be aligned forwards or backwards by knocking with a rubber-headed hammer.

- 5 Tighten upper bolts slightly in order to prevent the seat console moving after the bolts have been tightened.

- 6 Remove seat.

- 7 **Nm** Tighten all bolts and nuts of the seat console.

- 8 Repeat on opposite side

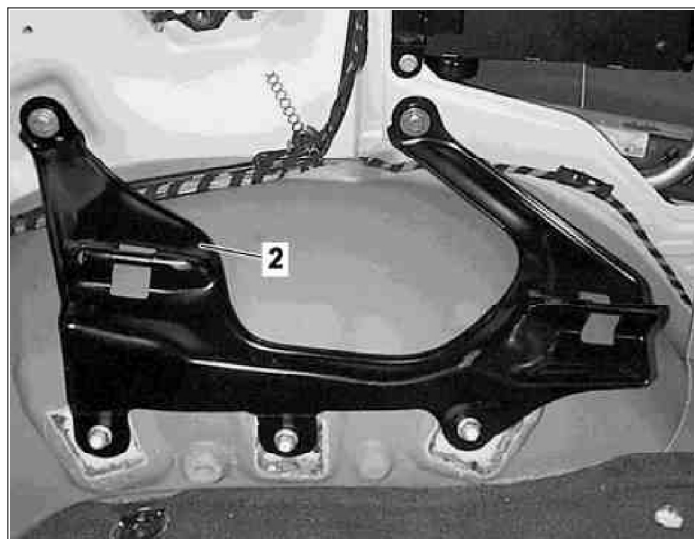

P91.12-2055-11