MODEL 163.113 /128 /136 /154 /157 /172 /174 /175


Illustrated up to VIN A289564, X754619

Paneling Screw 2 3 Nuts

Left electrically adjustable and heated outside mirror M21/1

M21/1x1 Left electrically adjustable and

heated outside mirror connector

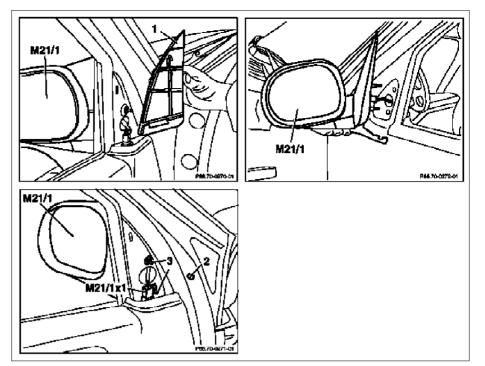

P88.70-0252-06

XX	Removing and installing		
1	Press off paneling (1) with assembly wedge	i As of VIN A289565, X754620: If present, disconnect connector from loudspeaker.	*110589035900
2	Unscrew screw (2)		
3	Unscrew nut (3)	i Secure outside rearview mirror against falling down i Installation: Up to VIN A289564, X754619 fasten mounting lug for connector for left electrically adjustable and heated outside rearview mirror (M21/1x1) or for connector for right electrically adjustable and heated outside rearview mirror on bottom stud bolt.	
4	Separate connector for left electrically adjustable and heated outside rearview mirror (M21/1x1) or connector for right electrically adjustable and heated outside rearview mirror		
5	Remove left electrically adjustable and heated outside rearview mirror (M21/1) or right electrically adjustable and heated outside rearview mirror		
6	Install in the reverse order		

